



## MicroLab Lite Installation Guide

Updated: April 2007

This document contains instructions for downloading and installing the MicroLab Lite software, supporting Fourier Systems' **MicroLite** USB data logger.

### System Requirements

To work with MicroLab Lite your system should be configured with the following:

#### Software

- Windows 98, Windows 2000, Windows ME, Windows XP, Vista
- Internet Explorer 5.0 or higher

#### Hardware

- Pentium 200 MHz or higher
- 32 MB RAM (64 MB recommended)
- 10 MB available disk space for the MicroLab Lite application


### Installation Procedure

*This installation procedure is written for computers running Windows 2000, Windows ME, Windows XP and Vista.*


1. Browse to the Fourier Systems Download Center ([http://www.fouriersystems.com/support/download\\_center.php](http://www.fouriersystems.com/support/download_center.php)) and click the MicroLab Lite download link.

You may either:


- a. Click **Save** to save the MicroLabLite\_setup.exe file to your PC and then double click the file icon to launch the Installation Wizard.
  - b. Click **Run** to install the software directly from the Fourier Systems website.
2. The MicroLab Lite software will first be installed. Follow the on-screen instructions to continue the installation process.

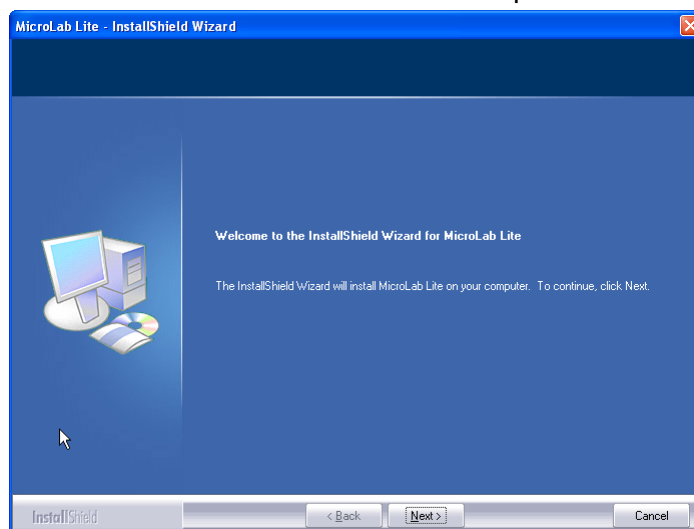


3. Once the MicroLab Lite software has been installed the Silicon Laboratories USB driver installation will begin automatically. The driver is necessary for the computer to detect the MicroLite logger.
4. Follow the on-screen instructions to continue the installation process. The default installation location is `C:\SiLabs`.

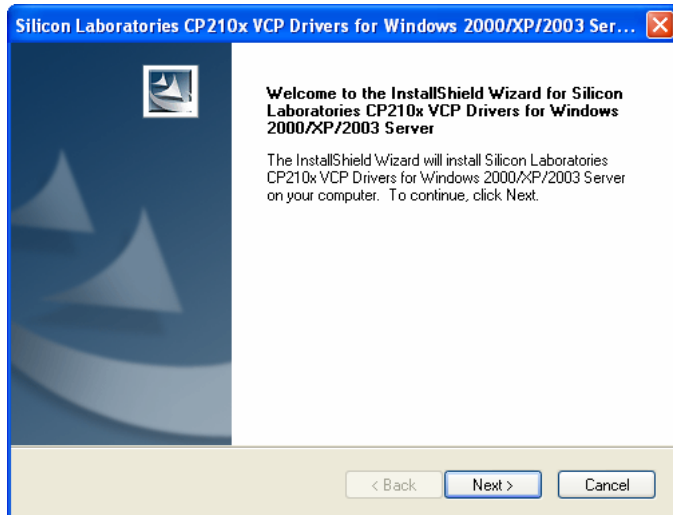

5. When the following dialog pops up, click **Install**.

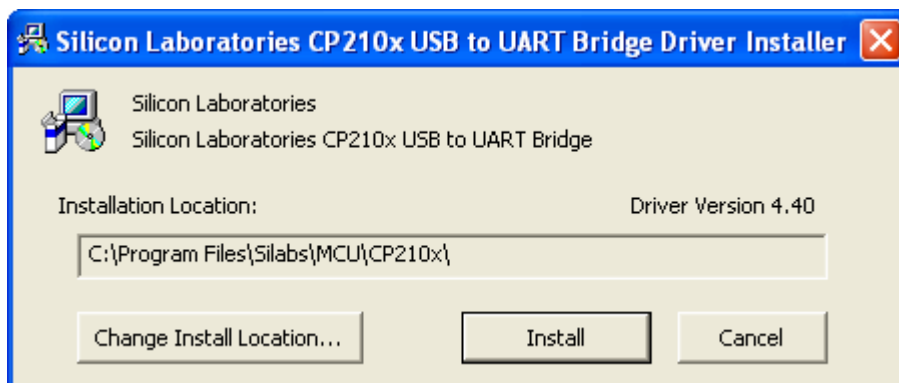



6. The installation of the driver could take up to one minute or more, depending on the system.

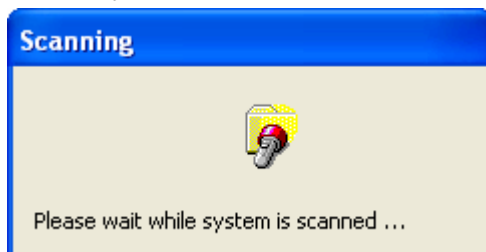

Once installed, click **Finish** to close the USB driver Install Wizard dialog.

7. The main MicroLab Lite InstallShield Wizard now resumes.

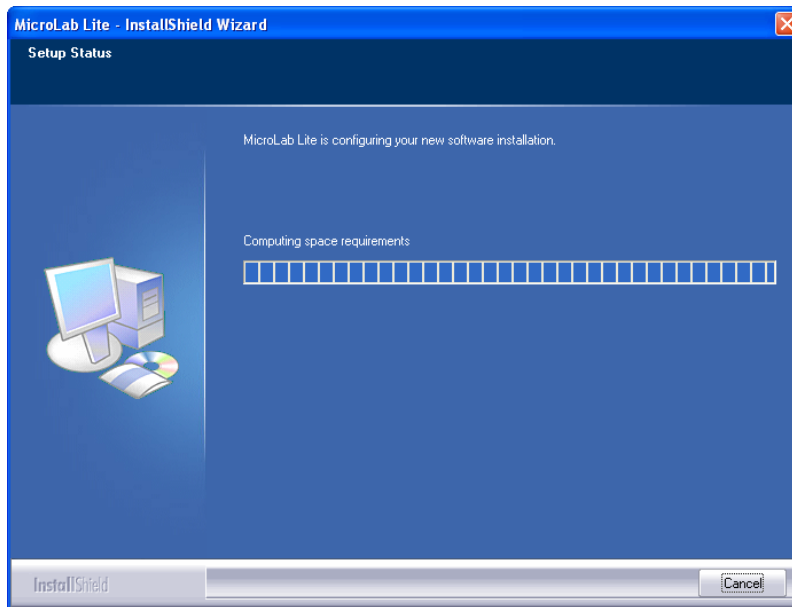

8. After a few more seconds, the installation process is completed. Click **Finish**.
9. Connect the MicroLite to a USB port on your PC. The PC will automatically detect the MicroLite as new hardware. After a few seconds you will see a message stating that the device is ready for use.
10. Double click the MicroLab Lite shortcut on your desktop  to launch the software. If the MicroLite is connected to the PC the software will automatically detect it.